



español y coreano P46~P75
스페인의 과 한국의 46 페이지 ~ 75페이지

Operating Instructions

Electronic Rice Cooker Household Use

Mode d'emploi

Cuisineur de riz électronique Utilisation domestique

使用説明書

微型電腦飯煲 家庭用

Model No. 1.0L SR-DF101
N° de modèle 1.8L SR-DF181
型號

Table of Contents

Table des matières

目錄

IMPORTANT SAFEGUARDS 2

Safety Precautions 4~5

Parts identification 6

- Control panel 6
- Entire unit 6

Preparations 7

Functions 8

- Quick Cook/Steam 8
- White Rice • Keep Warm 9
- Brown Rice 10
- Porridge/Soup 11

Recipes 12~13

Cleaning and maintenance 14

Troubleshooting 15

Specifications 15

Memo 40~41

PRÉCAUTIONS À PRENDRE 3

Consignes de sécurité 16~17

Identification des pièces 18

- Panneau de commande 18
- Vue d'ensemble de l'appareil 18

Préparations 19

Fonctions 20

- Cuisson rapide/Vapeur 20
- Riz blanc • Maintien au chaud 21
- Riz brun 22
- Gruau/Soupe 23

Recettes 14~25

Nettoyage et entretien 26

Guide de dépannage 27

Caractéristiques techniques 27

Mémo 40~41

安全注意事項 28~29

零件名稱 30

- 操作面板 30
- 本體 30

準備工作 31

功能 32

- 快速/蒸饅 32
- 白米 • 保溫 33
- 糙米 34
- 稀飯/湯 35

菜譜 36~37

清潔保養 38

故障排除 39

規格 39

備忘 40~41

Thank you for purchasing the Panasonic product.

- This product is intended for household use only.
- Please read these instructions carefully and follow safety precautions when using this product.
- Before using this product **please give your special attention to "Safety Precautions" (Page 4~5).**
- Please make sure the date and name of store of purchase are stamped and keep it with this Operating Instructions.

Reserve it for later use

Merci d'avoir acheté ce produit Panasonic.

- Ce produit est conçu uniquement pour une utilisation domestique.
- Veuillez lire ces instructions attentivement et suivre les consignes de sécurité lors de l'utilisation de ce produit.
- Avant d'utiliser ce produit, **Veillez porter une attention particulière aux « Consignes de sécurité » (Pages 16~17).**
- Assurez-vous que la date d'achat et le nom du magasin où vous avez acheté le produit sont indiqués et conservez ces informations avec le mode d'emploi.

Conservez le mode d'emploi pour une utilisation ultérieure

感謝您購買Panasonic產品。

- 本產品只適合家庭用。
- 使用本產品時，請仔細閱讀本使用說明書並遵循安全注意事項。
- 使用本產品前，請特別留意「安全注意事項」（第28~29頁）。
- 請確認保修證已蓋好購買日期和購買店名戳章，並與本使用說明書放在一起。

保留備用

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plugs, or Rice Cooker except the pan in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Remove plug from outlet when the appliance is not in use, before putting on or taking off parts, and before cleaning. Allow to cool before handling.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance before plugging cord into wall outlet.
To disconnect, turn the control to “ off ” , then remove plug from wall outlet.
13. Do not use appliance for other than intended use.

14. SAVE THESE INSTRUCTIONS.

15. This product is intended for household use.

NOTE

- a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a longer detachable power-supply cord or extension cord is used,
 - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and
 - 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

PRÉCAUTIONS À PRENDRE

Lors de l'utilisation de tout appareil électrique, il est toujours recommandé de prendre certaines précautions, dont les suivantes :

1. Lire toutes les instructions.
2. Éviter de toucher aux surfaces chaudes. Toujours utiliser les poignées ou les anses.
3. Afin de prévenir tout risque de choc électrique, ne pas immerger les cordons, les fiches ou l'appareil dans l'eau ou tout autre liquide, à l'exception du panier et du couvercle intérieur amovible.
4. Ne jamais laisser des enfants utiliser l'appareil sans surveillance.
5. Après usage et avant le nettoyage, toujours débrancher l'appareil. Laisser refroidir avant de retirer des pièces ou de les remettre en place.
6. Ne jamais utiliser l'appareil si sa fiche ou son cordon est endommagé ou après avoir constaté une défectuosité ou des dommages. Le cas échéant ce câble doit être remplacé par le fabricant, son service après-vente ou une personne de qualification similaire afin d'éviter tout danger!
7. L'utilisation d'accessoires non recommandés par le fabricant peut représenter un risque de dommages.
8. Ne pas utiliser l'appareil à l'extérieur.
9. Ne pas laisser le cordon pendre d'une table ou d'un comptoir, ni le mettre en contact avec une surface chaude.
10. Ne pas placer l'appareil sur le dessus ou à proximité d'un appareil de chauffage, ni dans un four chaud.
11. S'assurer d'être extrêmement prudent lors du déplacement d'un appareil contenant de l'huile chaude ou tout autre liquide chaud.
12. Toujours brancher le cordon d'alimentation à l'appareil avant d'en brancher la fiche dans une prise secteur. Avant de débrancher, couper le contact, puis retirer la fiche de la prise secteur.
13. N'utiliser l'appareil qu'aux fins recommandées.

14. CONSERVER CE MANUEL

15. Cet appareil a été conçu pour un usage domestique.

NOTA

- a) Le cordon d'alimentation fourni est court (ou détachable) de manière à prévenir les risques d'emmêlement et d'accidents.
- b) Des rallonges ou des cordons plus longs sont disponibles. Ils doivent être utilisés avec prudence.
- c) Si une rallonge ou un cordon long est utilisé:
 - 1) La quissance électrique du cordon ou de la rallonge devrait être au moins aussi élevée que celle de l'appareil.
 - 2) Le cordon ou la rallonge ne devrait pas pendre du comptoir ou de la table afin d'éviter que des enfants tirent dessus ou trébuchent.

Cet appareil est muni d'une fiche polarisée (fiche avec une lame plus large que l'autre). Par mesure de sécurité, cette prise ne peut être insérée que dans un sens dans une prise polarisée. Si la fiche ne peut être insérée dans la prise, en inverser le sens. Si la fiche ne peut toujours être insérée, communiquer avec un électricien pour remplacer la prise de courant. Ne pas tenter de contourner cette mesure de sécurité.

Safety Precautions

Must be followed!

In order to prevent accidents or injuries to the users, other people, and damage to property, please follow the instructions below.

■ The following charts indicate the degree of damage caused by wrong operation.



Warning: Indicates serious injury or death.



Caution: Indicates risk of injury or property damage.

■ The symbols are classified and explained as follows.



These symbols indicate prohibition.



This symbol indicates requirement that must be followed.

Warning

■ Do not use the appliance if the power cord or power plug is damaged or the power plug is loosely connected to the power outlet.



(It may cause an electric shock, short circuit or fire.)

■ Do not insert any objects in the vent or gap.



Especially metal objects such as pins or wires. (It may cause an electric shock or malfunction.)

■ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.



(It may cause burn or injury.)

■ Clean the power plug regularly.



(A soiled power plug may cause insufficient insulation due to the moisture, and may cause a fire.)

- Unplug the power plug, and wipe with a dry cloth.

■ Do not damage the power cord or power plug.



Following actions are strictly prohibited.

Modifying, placing near heating elements, bending, twisting, pulling, putting heavy objects on top, and bundling the cord (It may cause an electric shock, short circuit or fire.)

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

■ Do not immerse the appliance in water or splash it with water.



(It may cause a short circuit or electric shock.)

- Please enquire with an authorised dealer if water gets inside the appliance.

■ Use only a power outlet rated at 10 amperes and alternating electric current at 120 volts.



(Plugging other devices into the same outlet may cause electric overheating, which may cause a fire.)

- Use only an extended cord rated at 10 amperes minimum.

■ Do not plug or unplug the power plug with wet hands.



(It may cause an electric shock.)

■ Do not get your face close to the steam vent or touch it with your hand. Keep the steam vent out of reach of small children.



Steam vent

(It may cause a burn.)



■ Do not modify, disassemble, or repair this appliance.



(It may cause a fire, electric shock or injury.)

- Please make enquiries at the store or the repair department of an authorised dealer.

■ Insert the power plug firmly.



(Otherwise it may cause an electric shock and fire caused by the heat that may generate around the power plug.)

- Do not use a broken power plug or a loose power outlet.

■ Discontinue using the appliance immediately and unplug the power connector in cases of abnormal situations and breaking down.



(It may cause smoking, a fire, or electric shock.)

(e.g. for abnormal situations or breaking down)

- The power plug and the power cord become abnormally hot.
- The power cord is damaged or power failure occurs when is touched.
- The main body is deformed or abnormally hot.
- The unit gives out smoke or scorching smell.
- There are cracks, looseness or wobbles of the appliance.
- The heating plate is warped or the pan is deformed.


→ Please make enquiries at Panasonic authorized service center for inspection and repair immediately.

Safety Precautions

Must be followed!

Caution

■ Do not use the appliance on following places.

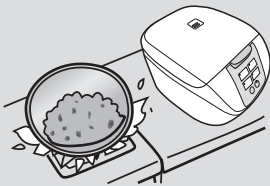

- The place where it may be splashed with water or near a heat source.
- The place with an uneven surface or on non-heat-resistant carpet.
- Near a wall or furniture. (It may cause a discoloration or deformation.)

■ Do not touch heating elements while the appliance is in use or after cooking.




Especially the heating plate (It may cause a burn.)

■ Do not expose the power plug with steam.



- Do not expose the power plug with steam when it is plugged in. (It may cause a short circuit or fire.)
- When using a cabinet with sliding table, use the appliance where the power plug cannot be exposed to steam.

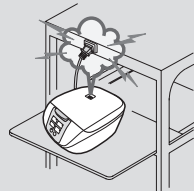

■ Do not touch the hook button while moving the appliance.



(It may cause the outer lid to open, resulting in a burn.)

■ Be sure to hold the power plug when unplugging the power plug.



(Otherwise it may cause an electric shock, short circuit, resulting in fire.)

■ Do not use the cord set (for instrument plug and power plug) that is not specified for use with this appliance. Also do not transfer them.



(It may cause an electric shock, leak, and fire.)

■ Unplug the power plug from the power outlet when the appliance is not in use.



(Otherwise it may cause an electric shock and fire caused by a short circuit due to the insulation deterioration.)

■ Please allow the appliance to cool down before cleaning it.



(Touching hot elements may cause a burn.)

■ Do not open the outer lid while cooking.



(It may cause a burn.)

■ Do not use other pans than the one specified.



(It may cause a burn and injury due to overheat or malfunction.)

Precautions for Use

Please put in correct amount of rice and water and select functions correctly according to the operating instructions.

(So as to avoid overflow of rice water, half-cooked rice or scorched rice.)

Do not put ingredients to be cooked directly into the appliance in which no pan is placed.

(So as to prevent any impurities from causing failure.)

Do not use the appliance on any heat labile object such as carpet, electric heating carpet and tablecloth (made of vinyl plastics), etc.

(So as to avoid poor cooking or fire.)

Before using the appliance, remove the protective bag on the pan and the anti-tarnish paper between the pan and the cast heater.
(So as to avoid poor cooking or fire.)

Do not cover the outer lid with cloth or other objects when the appliance is in use.
(So as to avoid deformation, color change of the outer lid or failure.)

 
Avoid using the appliance under direct sunlight.

(So as to avoid color change.)

Do not serve out rice with any metal object.

(So as to avoid scratching the pan coating and causing peeling of the coating.)

Please always clean the foreign objects such as rice on the pan, cast heater and temperature sensor.



Pan
Cast heater
Temperature sensor

- Do not tilt or overturn the appliance.
- Before cleaning, turn off the power switch and pull out the power plug.

When there is any overflow of rice water from the steam vent, pull out the power plug immediately to disconnect the power supply. Do not resume the use until the rice water on the power plug and the instrument plug is cleaned with a dry cloth.

The appliance is for household use only. Do not use it for any commercial or industrial purposes or any purposes other than cooking.

When power failure occurs during the operation of the appliance, the cooking result may be affected.


Parts identification

Control panel

Press this button for quick cooking or steam cooking.

Press this button for cooking of brown rice.

Press this button to cancel the previous operation or stop keep warm function.

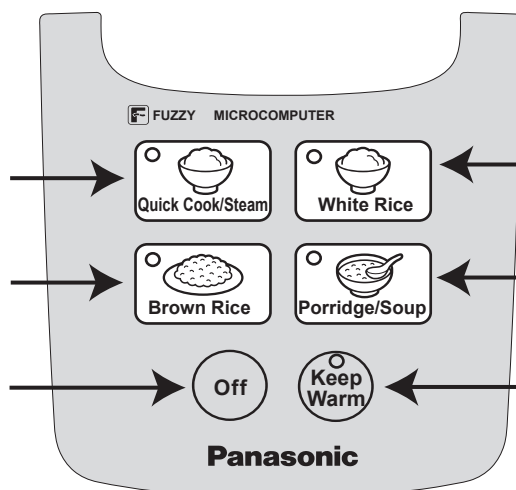

Press this button for cooking of rice.

Press this button for cooking of porridge or soup.

Press this button for keep warm function.

※ This warm jar has no touch sound or end sound.

Entire unit

Outer lid

Pan seal ring

Moisturizing cap


Heating plate

Pan

Hook button


Control panel

Body

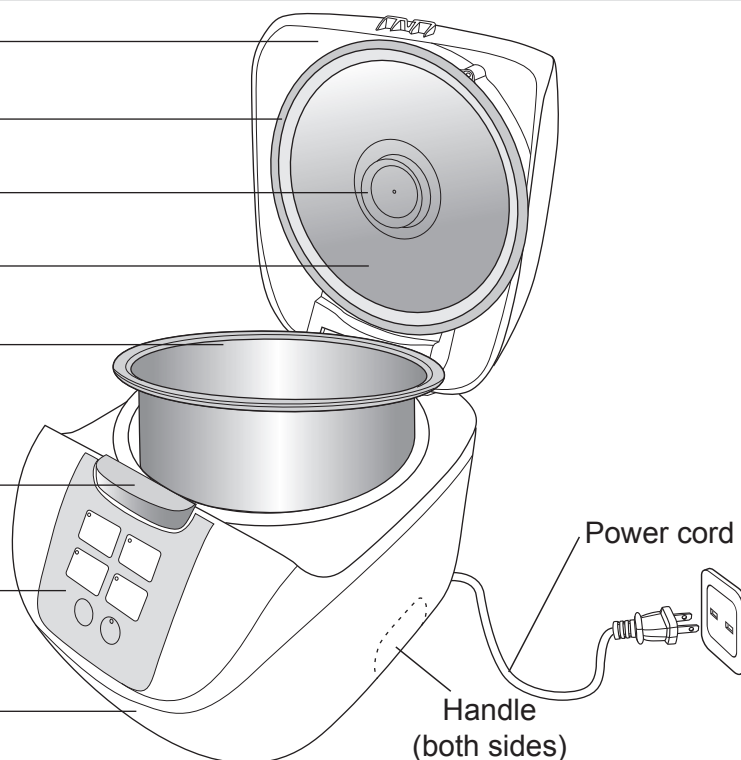

Accessories


※ Please clean the accessories before using.

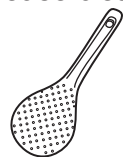

Rice scoop (1)



 Measuring cup (about 180 mL) (1)




Steaming basket (1)

Preparations

1 Measure rice with the measuring cup provided

- The volume of the measuring cup is about 180 mL (150 g).
- Maximum quantity of rice to be cooked at once P13.
- When using 1.8 L Model for quick cooking of rice or cooking of long-shaped rice, please keep the maximum quantity of rice within 8 cups.

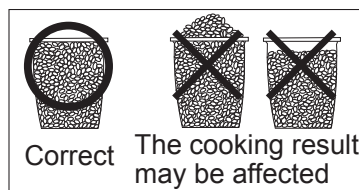


2 Wash the rice till the water turns relatively clear

- ① Wash the rice quickly with plenty of water and stirring the rice lightly to wash it while changing water.
- ② Repeat for several times [wash the rice→pour out water], till the water turns relatively clear.

Attentions

- In order to avoid scratching the non-stick coating on the pan surface, do not wash rice in the pan.
- Wash the rice thoroughly. Otherwise, rice crust may appear and the residual rice bran may affect the taste of the rice.

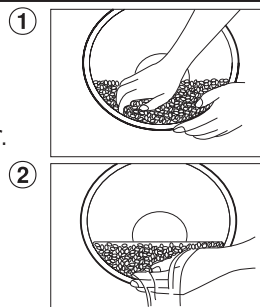

3 Place the washed rice into the pan


Add water until the corresponding waterline and dry the outside of the pan.

- When adding water, pay attention to the scales at both sides and keep them at the same height.
- When stewing soup, the total volume of ingredients and water shall not exceed the maximum waterline for "PORRIDGE".
- When cooking mixed rice or glutinous rice, please add water according to the following table.

Rice quantity (measuring cups)	Water quantity (measuring cup provided)			
	Mixed rice		Glutinous rice	
	1.0 L Model	1.8 L Model	1.0 L Model	1.8 L Model
1	1 1/2	1 1/2	1 1/4	1 1/4
2	2 3/4	2 3/4	2	2
3	4	4	3	3
4	---	5	---	4
5	---	6 1/4	---	5

※The above water quantities can be increased or decreased according to personal preference.


<Example> When the rice quantity is 6 measuring cups, wash the rice and put into the pan, then add water into the pan till the water surface reaches scale "6" at waterline of "WHITE RICE".

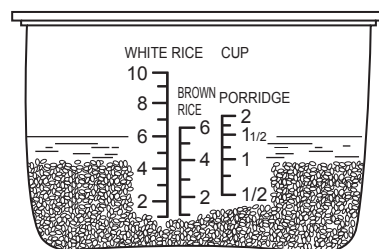

(Example: 1.8 L Model)


4 Put the pan into the body and close the outer lid

- In order that the pan bottom can be closely attached to the cast heater, please rotate the pan along the direction indicated by the arrow for 2 or 3 times.
- Please check whether the moisturizing cap is correctly positioned. (P12)
- When closing the outer lid, please confirm that there is a "click" sound.

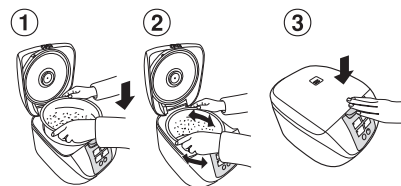

5 Connect the plugs

- Please connect the instrument plug to the body first and then connect the power plug. Make sure that both plugs are firmly connected.

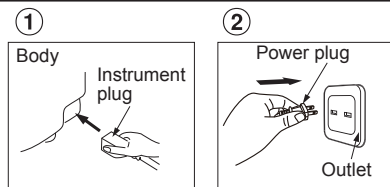


Attentions

- * When using the steaming basket while cooking rice, please refer to the table on the right for the maximum cooking volumes.

Maximum cooking volume (measuring cup provided)

Model No.	1.0 L Model	1.8 L Model
Maximum cooking volume	2	5

Functions Quick Cook/Steam

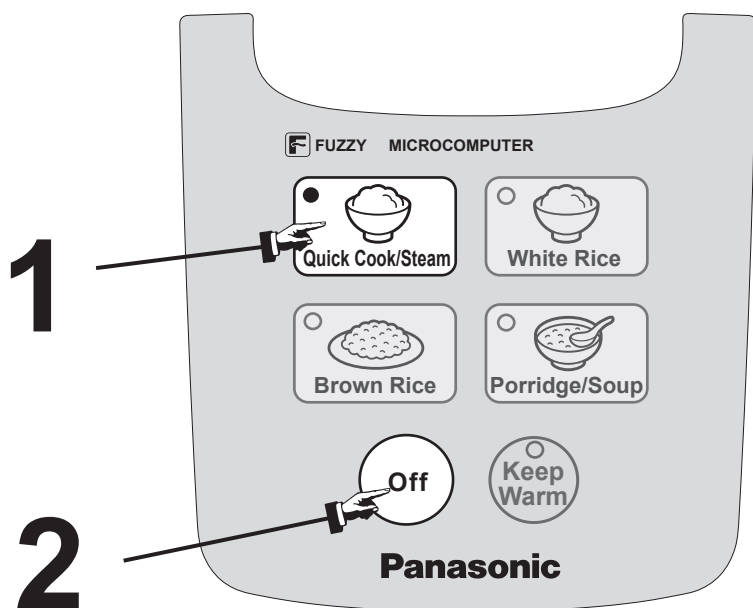


Kind reminder

- When steaming food at same time as cooking rice, please select [White Rice] function.
- The time of steam shall be determined according to the water quantity in the pan. Please adjust the water quantity according to the time required.
- After the water gets boiled and fully evaporated, the warm jar will turn to the keep warm function automatically.
- If you want to stop steam function during cooking, press [Off] button.
- [Quick Cook/Steam] button can be used for quick cooking rice, please refer to P7 [White Rice] for detailed operations. As the cooking time is shortened, the rice may be harder or there may be rice crust.

Operations (For example: steam with [Quick Cook/Steam] function)

- Add a proper quantity of water (refer to the following table).
- Put the steaming basket into the pan.
- Put the foods to be steamed into the steaming basket.
- Close the outer lid.

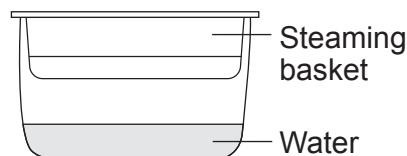

1 Press [Quick Cook/Steam] button

- The indicator for [Quick Cook/Steam] lights up and the steaming starts.

◆ The indicator lights up



Table of steaming time and water quantity. The entire duration from the start to the end refers to the time shown in the following table.

Water quantity (approx.)	1/2 Measuring cup	1 Measuring cup	2 Measuring cups	3 Measuring cups
Steaming time (approx.)	15 Minutes	30 Minutes	50 Minutes	65 Minutes

* The maximum time of steaming is about 70 minutes. When the time is up, no matter the water is completely evaporated or not, the warm jar will turn to keep warm function automatically.

The cooking is over

- After the water in the pan gets boiled and fully evaporated, the steaming function is ended and the warm jar will turn to keep warm function automatically.


2 Press [Off] button

- No sound when the cooking process is over.
- At this time, the steaming basket is very hot. Please be careful when taking it out.

◆ The indicator lights up The indicator turns off



Functions White Rice • Keep Warm

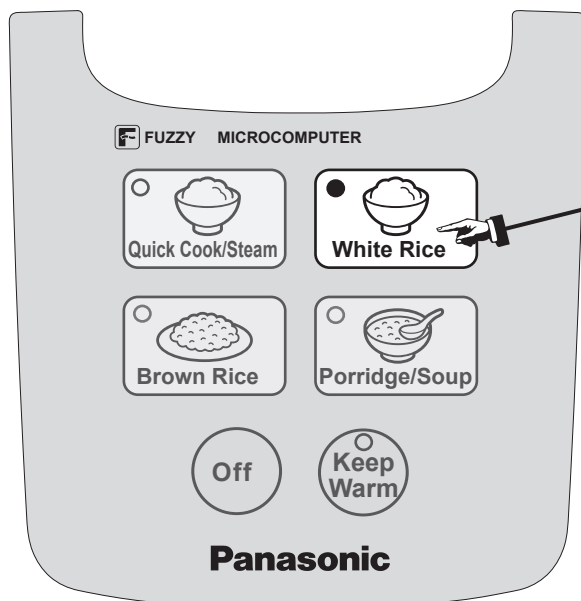

Kind reminder

- When cooking mixed rice or glutinous rice, please select [White Rice] function. For water quantity, please refer to P5.
- Rice cooked with [White Rice] function can be softer and has a better taste.

Operations (For example: cook rice with [White Rice] function)

1 Press [White Rice] button

- The indicator for [White Rice] lights up and the cooking starts.

◆ The indicator lights up



■ Cooking time (reference)

Quick Cook	About 30 minutes
White Rice	About 38 minutes

- The reference time required for cooking at the voltage of 120 V, the room temperature of 20°C, the water temperature of 18°C and the medium rice quantity refers to the time listed in the left table. (1.0 L Model: 3 cups, 1.8 L model: 5 cups)
- The cooking time may vary slightly according to different voltages, room temperatures, water temperatures, water quantities, rice quantities and rice qualities.
- The cooking time of mixed rice or glutinous rice may vary because of the different ingredients added into the rice.

The cooking is over

Loosen the rice

- When the cooking process is over, the warm jar will turn to keep warm function automatically. To prevent the rice from sticking together, please loosen the rice after cooking.
- No sound when the cooking process is over.

◆ The indicator lights up




Keep Warm

- When the cooking process is over, all functions will turn to keep warm function automatically. But some functions are not recommended to use keep warm function, when the cooking process is over, please press [Off] button after cooking.

- You can enjoy the rice within 5 hours in keep warm function, so as not to affect the taste or cause strange smell.
- When in keep warm function, there may be some droplets at the edge of the pan.
- The rice taste may be affected if the rice scoop is left in the warm jar when the rice is in keep warm function.

Menu	Keep warm	The result after kept warm
Quick Cook, White Rice, Soup	○	
Brown Rice, Mixed rice, Glutinous rice	×	Affect the taste or cause strange smell
Porridge	×	Rice from getting thicker

Functions Brown Rice

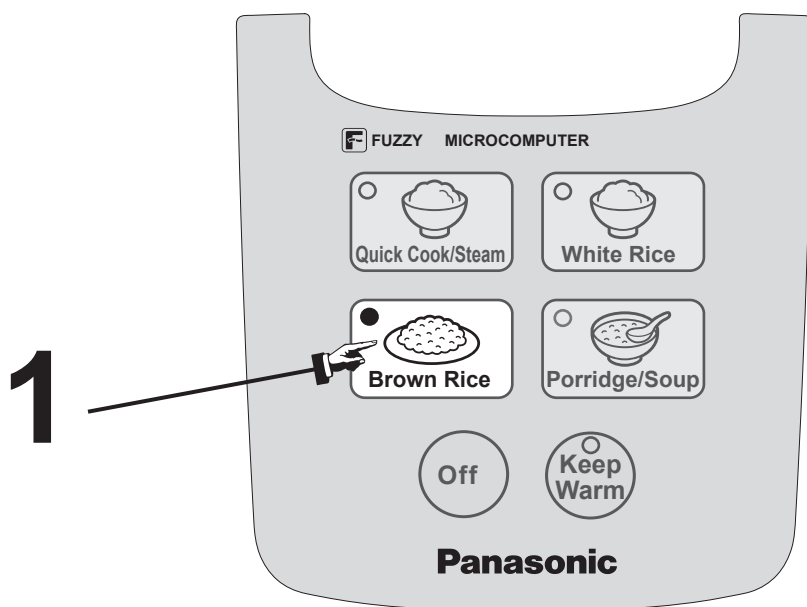

Kind reminder

- Do not use keep warm function for brown rice, so as not to affect the taste.

Operations (For example: cook rice with [Brown Rice] function)

1 Press [Brown Rice] button

- The indicator for [Brown Rice] lights up and the cooking starts.

◆ The indicator lights up



Cooking time (reference)

Brown Rice	About 1 hour and 50 minutes
------------	-----------------------------

- The reference time required for cooking at the voltage of 120 V, the room temperature of 20°C, the water temperature of 18°C and the medium rice quantity refers to the time listed in the left table. (1.0 L Model: 2 cups, 1.8 L model: 3 cups)
- The cooking time may vary slightly according to different voltages, room temperatures, water temperatures, water quantities, rice quantities and rice qualities.

The cooking is over

Loosen the rice

- When the cooking process is over, the warm jar will turn to keep warm function automatically. However, keep warm function is not recommended to prevent from affecting the taste, press [Off] button after cooking.
- No sound when the cooking process is over.


◆ The indicator lights up



The indicator turns off



Functions Porridge/Soup

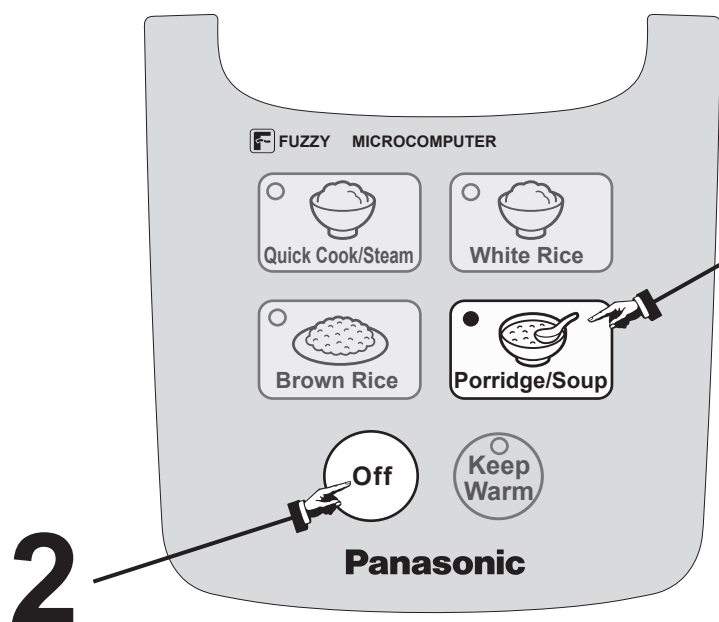

■ Kind reminder

- Incorrect water quantity or rice quantity may lead to overflow of rice water from the steam vent.
- When the outer lid is opened in cooking, the amount of moisture condensation may be increased.
- When the porridge is kept in keep warm function for an excessively long time, it will get thicker.
- Each time after use, take off and clean the moisturizing cap so as to prevent any strange smell.

Operations (For example: when cooking porridge with [Porridge/Soup] function)

1 Press [Porridge/Soup] button

- The indicator for [Porridge/Soup] lights up and the cooking starts.
 - Reference cooking time (approx.): 1 hour and 30 minutes.
- ※ When the maximum cooking volume of soup (ingredients and water) exceeds the maximum waterline for "PORRIDGE", overflow or half-cooked soup may occur. (Refer to P13 for specifications)

◆ The indicator lights up



The cooking is over

2 Press [Off] button

- After the cooking process is over, the warm jar will turn to keep warm function automatically. However, keep warm function is not recommended to prevent from affecting the taste, press [Off] button after cooking.
- No sound when the cooking process is over.


◆ The indicator lights up



The indicator turns off



Recipes

- Caution:**
- Because of the different ingredients added into the rice, there may be scorched rice at the bottom.
 - In this recipe, the cooking volume is for 1.8 L Model. Please refer to the specifications listed on  P13 for cooking volumes for 1.0 L Model.
 - 1 cup (measuring cup): about 150 g.

Mixed Chicken Rice

Ingredients:

Rice	3 measuring cups
Water	4 measuring cups
Chicken	80 g, chopped into small pieces
Burdock	35 g, sliced
Mushroom	2 pieces, after soaking in water, remove the base and shred into strips
Fried bean curd	2 pieces, pour with hot water to remove grease and then shred into strips
Carrot	40 g, shredded into strips

Seasoning:

Cooking wine, soy sauce	20 mL each
Salt	3 g

Cooking method:

- 1) Boil the chicken and burdock in hot water quickly and drain them immediately.
- 2) Wash the rice, put into the pan and add 4 measuring cups of water.
- 3) Pour the seasoning into the pan, stir and put the remaining ingredients in. Close the outer lid.
- 4) Press [White Rice] button to start cooking. When the cooking process is over, you can enjoy the meal.

Corn and Rib Soup

Ingredients:

Ribs	500 g, chopped into 5cm pieces
Corn	2, about 450 g, cut into 5cm pieces
Water	Amount of water for scale 5 waterline of "White Rice"

Seasoning:

Salt	6.5 g
------	-------

Cooking method:

- 1) Put the ribs into boiling water to remove residual blood and drain them for later use.
- 2) Put all ingredients into the pan, add salt and close the outer lid.
- 3) Press [Porridge/Soup] button, and the cooking process will end after about 1 hour and 30 minutes. (Other seasoning such as chicken powder can be added according to personal preference.)

Recipes

Dim Sum (frozen)

Ingredients:

- | | |
|------------------|---------------------------|
| (A) Small pieces | (B) Big pieces |
| Shrimp dumplings | Steamed BBQ pork buns |
| Sumai | Steamed buns |
| | Sticky rice in lotus leaf |

Cooking method:

- 1) Defrosting is not required. Just put the frozen Dim Sum on the steaming basket and spray some water on the surface of Dim Sum.
- 2) Add 1/2 measuring cup of cold water into the pan.
- 3) Put the steaming basket into the pan and close the outer lid.
- 4) Press [Quick Cook/Steam] button, wait for about 10 minutes and then press [Off] button.

Mung Bean and Lilium Porridge

Ingredients:

- | | |
|-------------|------|
| Mung bean | 70 g |
| Sticky rice | 70 g |
| Lilium | 10 g |

Seasoning:

- | | |
|-------|----------------------------------|
| Sugar | According to personal preference |
|-------|----------------------------------|


Cooking method:

- 1) Put the washed mung beans, sticky rice and lilium into the pan and add water until scale 1 of waterline for "PORRIDGE".
- 2) Close the outer lid and press [Porridge/Soup] button. The cooking process will end after about 1 hour and 30 minutes.
- 3) Add some sugar according to personal preference and enjoy the meal.

Cleaning and maintenance

Attentions

- Before cleaning and maintenance, please pull out the power plug first. Do not clean the warm jar until it cools down.
- When cleaning the warm jar, do not immerse it into water, or clean it with lacquer thinner, alcohol, cleaning powder or hard brush, etc.
- Do not use dishwasher.

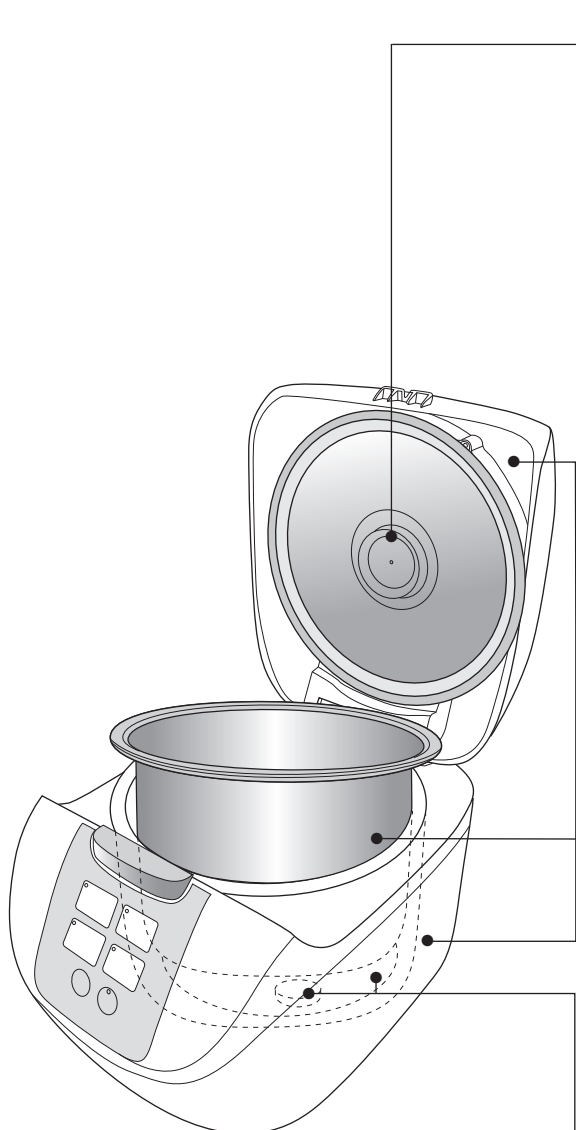

Moisturizing cap

■ Disassembling

Pull out from the heating plate.



■ Assembling

Insert into the hole on the heating plate in a reverse direction as disassembly. Please fully insert it into the hole to prevent falling off.



Caution

- The moisturizing cap can be taken off directly. Clean it after each use.
- After cleaning, do not dry it with a dishwasher etc.; otherwise deformation or crack may be caused.
- When installing it after cleaning, please make sure that the seal ring has been installed on the moisturizing cap.

Entire unit • Outer lid (sealed part)

Clean with a well-wrung cloth.

- If foreign objects are not removed, the foreign objects on the heating plate may stick to it and become difficult to remove. Clean the heating plate after each use. As the metal parts are heated, there may be color change or stripes on their surfaces, which will not affect their normal functions.
- Do not pull the pan seal ring.

Pan

- Clean with diluted detergent and soft sponge. Wipe off any water on the pan.
- Color change or stripes may appear on the fluoridized coating surface, which will not affect human health or normal functions of the warm jar.
- Depending on the frequency of use, rubbing traces may appear on the outside of the pan, which will not affect the performance of the warm jar.

Temperature sensor • Cast heater

- When there is any foreign object adhering to such parts, gently scrub it away with fine crocus paper (#600) or a dry cloth.

Accessories

 
Clean with diluted detergent and soft sponge.



Rice scoop



Measuring cup



Steaming basket

Troubleshooting

Please check the following items

In the following events Items for check	Rice					Rice kept warm			Button operations do not work	The following sounds appear during the use
	Harder	Half-cooked	Softer	Rice water overflow	Rice crust scorched	Strange smell	Color change	Dry		
• Incorrect rice quantity or water quantity	●	●	●	●					• The plug is pulled out or gets loose.	<ul style="list-style-type: none"> • When there are [click] sounds in cooking, the cast heater is adjusting the temperature, this is not a malfunction. • When there are [pop] sounds in cooking, water drops at the bottom of the pan (outside) and gets broken after being heated. This is not a malfunction.
• Rice is not fully washed				●	●	●				
• The pan bottom is uneven	●	●			●					
• There are foreign objects on the outside of the pan or temperature sensor	●	●	●		●	●				
• The outer lid is not correctly closed	●			●				●		
• The moisturizing cap is not correctly installed	●			●		●	●	●		
• Grease is added when cooking the rice	●	●				●				
• After cooking is finished, the rice is not loosen	●		●							
• Keep warm over 5 hours	●					●	●	●		
• The quantity of rice kept warm is too small						●				
• The rice scoop is left in the warm jar when the rice is kept warm						●				
• The cold rice is kept warm						●	●	●		
• The outer lid is not firmly closed					●	●				
• The pan is not cleaned										
• While in cooking, the plug is pulled out or the [Off] button is touched		●								
• The wrong button is pressed	●	●	●	●	●					

Specifications

Model No.		SR-DF101	SR-DF181
Power/rated frequency		120 V ~ 60 Hz	
Rated power (rice cooking)		750 W	
Rated volume of pan L		3	4.8
Rice cooking volume (rice quantity) L	White Rice/Quick Cook	0.18~1.0 [1~5.5 cups]	0.18~1.8 [1~10 cups] Quick Cook [1~8 cups]
	Brown Rice	0.18~0.54 [1~3 cups]	0.18~1.08 [1~6 cups]
	Mixed rice/Glutinous rice	0.18~0.54 [1~3 cups]	0.18~0.9 [1~5 cups]
Porridge cooking volume (rice quantity) L		0.09~0.18 [1/2~1 cup]	0.09~0.36 [1/2~2 cups]
Maximum cooking volume (ingredients + water) for soup L		1.5※	2.3※
Power cord length (approx.) m		1.0	
Product weight (approx.) kg		2.5	2.8
Dimensions (approx.) cm	Width	24.5	
	Length	33.9	
	Height	19.9	24.7

- Marked with ※, it means that the maximum cooking volume for soup is the highest waterline for "PORRIDGE".
- For power cord replacement and product repairing, please contact the authorized service center of Panasonic.
- The design and specifications are intended to change without prior notice.